

Connection Diagram for 3-button Telescopic Dock Leveller Control

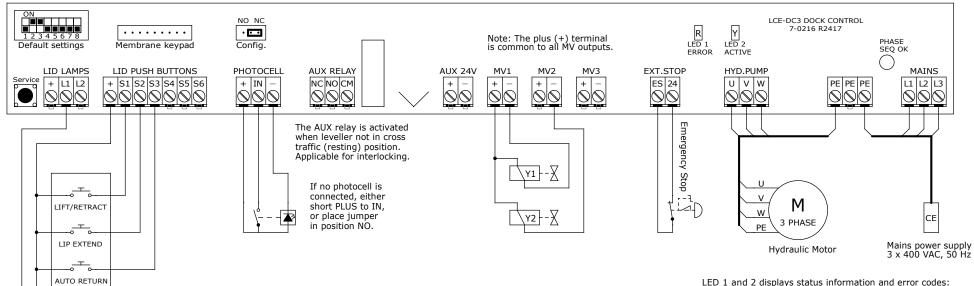

FUNCTION PUMP MV1 MV2 LIFTING ON OFF ON **EXTEND** ON OFF OFF LOWER OFF ON OFF STOPPED OFF OFF OFF

Auto Return Lift and Retract Time

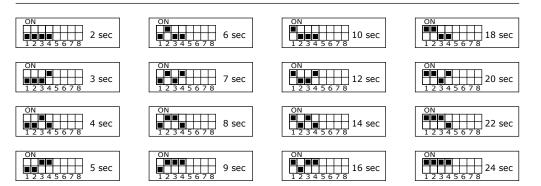

Yellow only: Manual or automatic operation in progress. Alternating: Operation blocked by photocell (check jumper). Yellow flash: No longer blocked, simply awaits re-activation. Red+Yellow: External STOP (must be shorted if not applied).

Errors (to be reset by power cycling the unit) are displayed continuously according to the below (ERR + ACT) encoding:

1 + n : Button n is stuck (upon 3 seconds of power-on). 2 + 1 : No power consumption (disconnected motor). 2 + 2 : Unbalanced power consumption (phase failure). 2 + 3 : High motor power (overload protection tripped). 2 + 4 : Control unit overheated (100 degrees Celsius). 3 + 1 : Contactor does not switch on when energised. 3 + 2 : Contactor does not switch off when de-energised. 3 + 3 : Contactor operation timeout (more than 45 sec). 4 + 1 : MV1 valve is on even though output switched off. 4 + 2 : MV2 valve is on even though output switched off. 4 + 3 : MV1 valve is off even though output switched on. 4 + 4 : MV2 valve is off even though output switched on. 5 + 1 : Power-on EPROM read/write failure (HW fault). 5 + 2 : Asymmetrically wrapped current transformers. 5 + 3 : Current transformer TR3 ground out of range. 5 + 4 : Current transformer TR4 ground out of range. 6 + n : Software failure (real-time operating system).

The service button (upper left corner) has two functions: - If replacing the hydraulic pump, push and hold the button while turning on the control unit to reset the stored motor protection settings. Confirmed by alternated LED flashing. - Push the button (repeatedly) at any other time to display the internal operations counter. The red LED counts the digit (1 for 10s, 2 for 100s, and up to 5 for 100,000s) and the yellow LED counts the value of the selected digit.